


S441

HORIZONTAL IN-PLACE INCLINOMETERS

INCLINOMETERS
& PENDULUMS



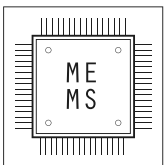

HORIZONTAL IN PLACE INCLINOMETERS

Horizontal IPI gauge consists of a stainless steel body with on one side the connection for carbon fibre extension rod and on the other side a stainless steel carriage with spring-loaded wheels.

IPI string is composed by a chain of IPI gauges with carbon fiber extension rods and a terminal wheels assembly. A string of horizontal IPIs is usually installed inside inclinometer casing buried within trenches, foundations or horizontal drill hole for automatic monitoring of settlement or heave.

The string is connected to readout or datalogger with single digital bus cable.

APPLICATIONS

- Embankment vertical displacements
- Settlement/heave in oil and gas tanks
- Slope deformation in earth and rockfill dams

FEATURES

- Removable and modular system for multiple installation
- Nearly real-time monitoring with OMNIAlog and miniOMNIAlog
- Internal humidity and power supply sensor permit to have more information in the event of gauge malfunction


 Meet the essential requirements of the EMC Directive 2014/30/UE

TECHNICAL SPECIFICATIONS

	0S441HD15S0	0S441HD30S0
Measurement principle	self-compensated digital MEMS inclinometer	
Axis	Uniaxial	
Measuring range	±10°, ±15°	±20°, ±30°
Sensitivity ⁽¹⁾	see calibration report	
Sensor accuracy		
Lin. MPE ⁽²⁾	±0.025% FS	±0.070% FS
Pol. MPE ⁽²⁾	±0.010% FS	±0.015% FS
Sensor 24h stability ⁽⁴⁾	< ±0.04 mm / m	
Offset temperature dependency	±0.002° / °C	
Power supply	from 8 to 28 Vdc	
Signal output and protocol	RS-485 with Modbus RTU protocol ⁽⁶⁾	
A/D converter	sigma-delta 32 bit, 38-KSPS	
Average consumption	4.3 mA @ 24 Vdc, 8 mA @ 12 Vdc	
Temperature operating range	from -30°C to +70°C	
Built-in temperature sensor range / accuracy	Temperature sensor (embedded in electronic board) from -40°C to +125°C / ±1 °C (-10°C + 85°C)	

PHYSICAL FEATURES

	GAUGE AND WHEELS ASSEMBLY	EXTENSION ROD
Material	stainless steel	stainless steel joint tips and carbon fiber rod
IP class	IP68 up to 1.0 MPa (2.0 MPa on request)	–
Casing compatibility ⁽⁷⁾	Min. casing ID 58 mm - Max casing ID 83 mm	–
Gauge length / Total weight ⁽⁸⁾	1.0 m length / 2.30 kg - 1.5 m length / 2.40 kg - 2.0 m length / 2.50 kg	

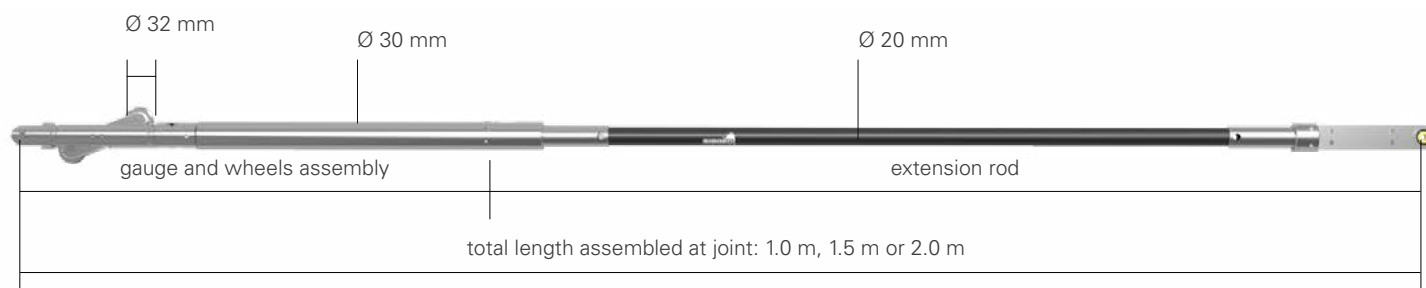

(1) Performance are granted for instruments installed in vertical casing installations where borehole inclination should be kept within ±2° of vertical, at any point along the borehole (ISO 18674-3).

(2) Sensitivity is a specific parameter different for every gauge. The sensitivity is calculated during gauge calibration test and inserted into the Calibration Report.

(3) MPE is the Maximum Permitted Error on the measuring range (FSR). In the Calibration Report, the accuracies of the gauge are calculated using both linear regression (≤ Lin. MPE) and polynomial correction (≤ Pol. MPE)

(4) Stability calculated as difference after a 24 h period under repeatability conditions (ISO 18674-3).


(5) 60 days test, reference reading taken 96 hours after installation, system composed by 15 BH-Profile gauges with 2m elongation rod. Test performed in nearly-repeatability conditions.

(6) RS485 not-optoisolated Modbus communication with RTU Protocol. Default output is sen α, other units available are degree, mm/m and inch/feet (to be requested at order). Sisgeo Modbus protocol manual is available for download at [this page](#).


(7) We strongly suggest to use Sisgeo ABS casing

(8) As for ISO 18674-3 standard, total length should not exceed 2 m. Longer instruments available on request (performances of longer instruments could be worst).

EMBANKMENT APPLICATION

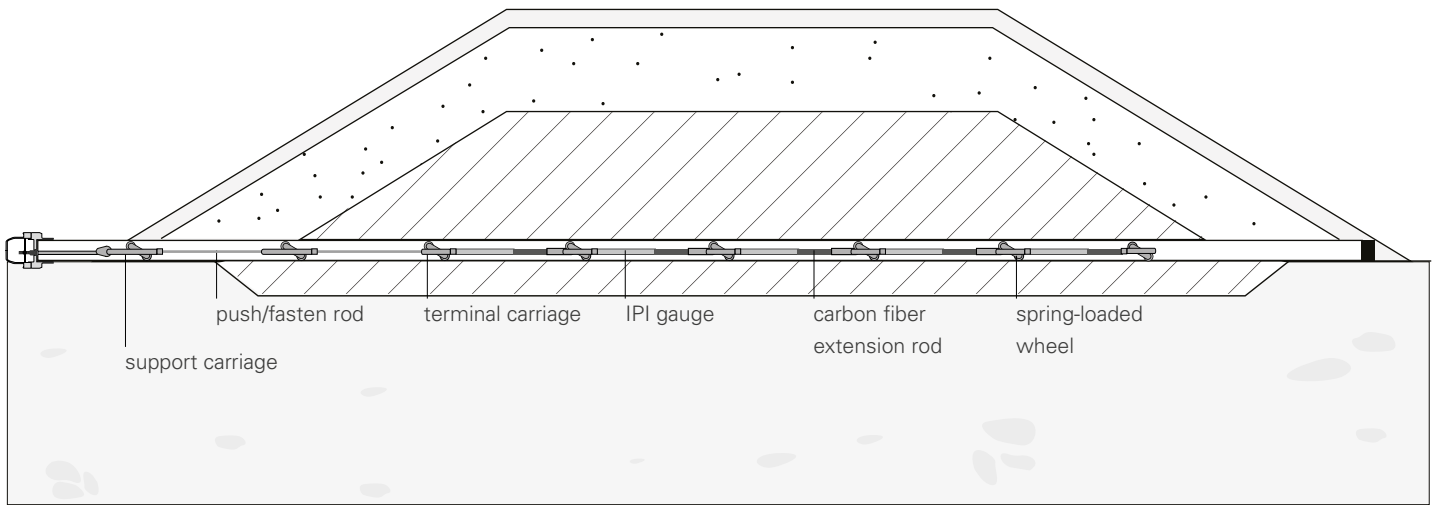

LNG TANK APPLICATION

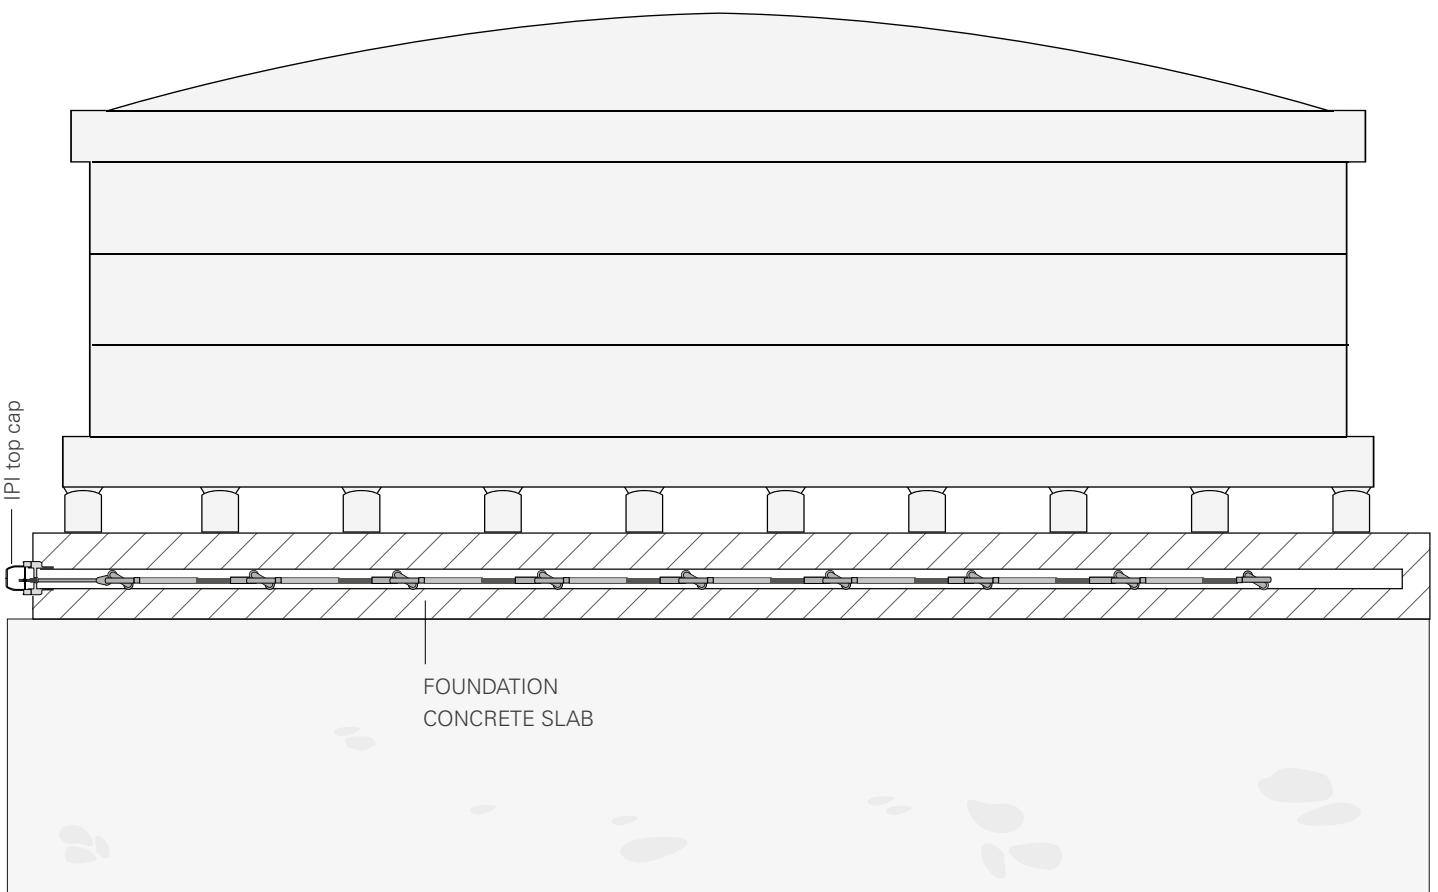

ACCESSORIES AND SPARE PARTS

CARBON FIBRE EXTENSION ROD OS430EX00RD

Extension rod rigidly connected to the IPI probe at factory. Available in different dimensions to reach a total probe length of 1.0 m, 1.5 m, 2.0 m and 3.0 m (length to be specified).

HORIZ. IPI TOP CAP ODEXOTS2350

Special cap with No.3 anchor that permits to fasten the horizontal IPI chain and fix it into the inclinometer tube.

UPPER CABLE WITH CONNECTOR OS400HD00MT

Available in different lengths (2m, 5m, 10m, 15m), it is composed by a signal cable with IP68 connector to link the upper inclinometer probe to the junction box or local logger.

TERMINAL WHEEL OS44WHE2SS0

Composed by one fixed wheel and one spring loaded wheel. It permits to end the IPI chain.

HORIZ. RODS SUPPORT CARRIAGE OS4RODOOSUP

Additional carriage to be inserted every 2m length of steel pushing rods in order to support the steel rod chain and to do not have any bending.

TERMINATION RESISTANCE OETERMRESIO

Resistance ending device with connector, needed to close every digital IPI chain. The value of resistor depends on the layout of the system. For more detail see the [FAQ#076](#).



PUSH/FASTEN RODS OS4RODOAC00

Threaded steel bar with special ends for pushing IPI chain into the tube and fasten it to the top cap. Available in 1.0, 2.0 and 3.0 m lengths.

DIGITAL INCLINOMETER CABLE OWE606IPDZH

LSZH cable for connecting digital BH profile chain to OMNIAlog datalogger.

READABLE BY

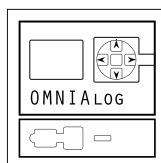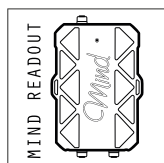

For further information refer to their own datasheets

All the information in this document is the property of Sisgeo S.r.l. and should not be used without permission from Sisgeo S.r.l. The manufacturer reserves the right to make changes to the product or to its parts without prior notice, also on the basis of contingent situations not related to the technical characteristics alone, such as, for example, material or components shortages. For the specific accuracy performance of each product, please refer to the Calibration Report issued for each instrument. The datasheet is issued in English and other languages. In order to avoid discrepancies and disagreement on the interpretation of the meanings, Sisgeo Srl declares that English Language prevails.

SISGEO S.R.L.

VIA F. SERPERO 4/F1
20060 MASATE (MI) ITALY
PHONE +39 02 95764130
FAX +39 02 95762011
INFO@SISGEO.COM

ADDITIONAL SUPPORT

SISGEO offers on-line assistance service to the Customers in order to maximize the performance of the system and training on the correct use of the instrument/readout.

For more information contact mail: assistance@sisgeo.com